



# Determination of the maximum tool length TSW and TFB

## Determination of the maximum tool length TSW and TFB

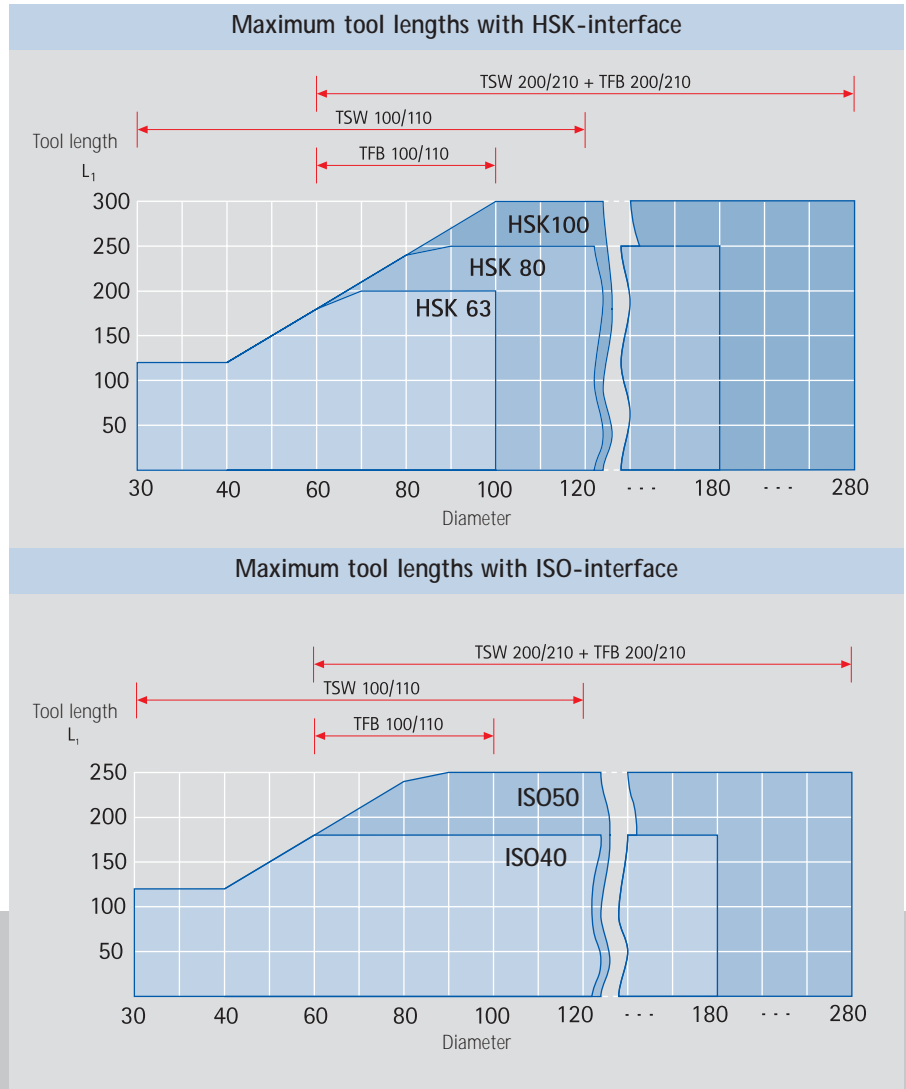

**Example 1: Modular design**  
TSW 200 with ISO 50

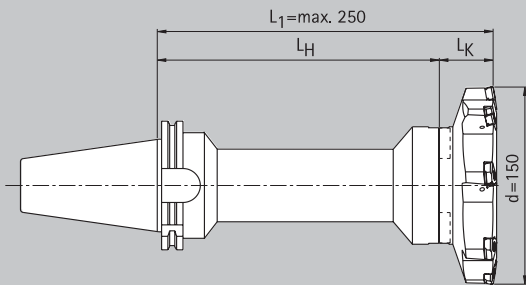

**Example 2: Monoblock design**  
TFB 100 with HSK 63

